


1 Comp. Loc. Relays

1.1 Relays Overview

- 1 - [⇒ a1.2 nd fuse carrier in rear, right", page 2](#)
- 2 - [⇒ o1.3 n relay carrier behind I/P", page 3](#)
- 3 - [⇒ c1.4 arrier behind I/P", page 4](#)
- 4 - [⇒ c1.5 arrier in E-box in plenum chamber", page 6](#)
- 5 - [⇒ c1.6 arrier in E-box engine compartment, V6 TDI only, from model year 2015", page 7](#)
 - ❑ V6 TDI only, from model year 2015

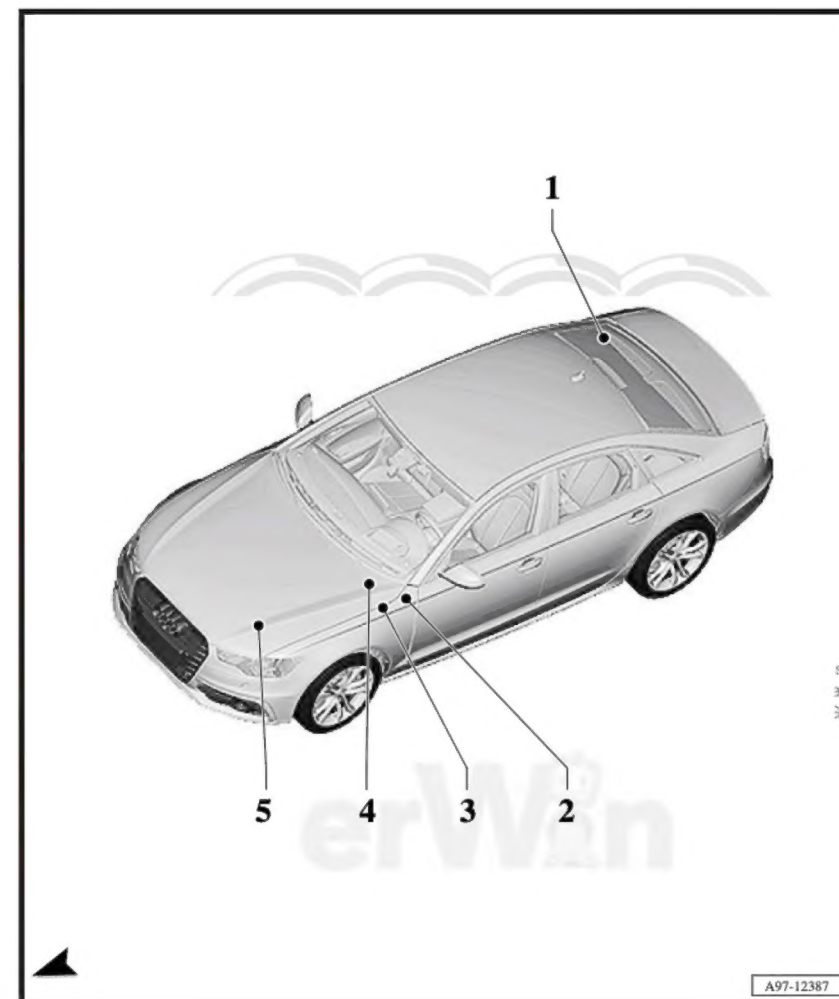

1.2 Relay and fuse carrier in rear, right

◆ ⇒ a1.2.1 nd fuse carrier in rear, right, through MY 2014", page 2

◆ ⇒ a1.2.2 nd fuse carrier in rear, right, from MY 2015", page 3

1.2.1 Relay and fuse carrier in rear, right, through MY 2014

A - 46-Pin Connector -T46b-, CAN Separating Connector, black

1 - Not used

2 - Rear Window Defogger Relay -J9-

3 - Sockets Relay -J807-

4 - Power Supply Relay 2 (terminal 15) -J681-

5 - Level Control System Compressor Relay -J403-

6 - Reducing Agent Metering System Relay -J963-


❑ only Reducing Agent Metering System

6 - Fan Activation Relay -J937-

❑ Only high-voltage models

6 - Fuel Pump (FP) Relay -J17-

❑ Only engine code CRDA, CRDB, CWUA, CWUB

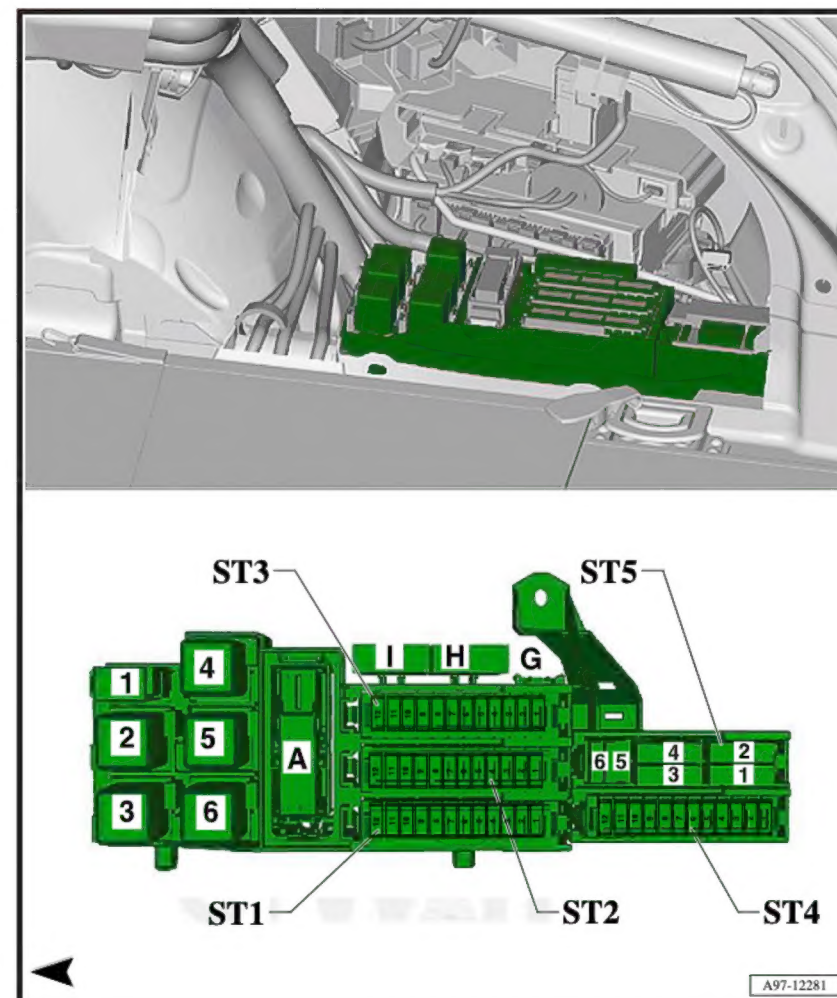

1.2.2 Relay and fuse carrier in rear, right, from MY 2015

A - 46-Pin Connector -T46b-, CAN Separating Connector, black

2 - Rear Window Defogger Relay -J9-

3 - Sockets Relay -J807-

4 - Power Supply Relay 2 (terminal 15) -J681-

5 - Level Control System Compressor Relay -J403-

☐ Only high-voltage models

5 - Vacuum Pump Relay -J318-

☐ Only high-voltage models

☐ from week 05/2018

☐ To week 04/2018 refer to [⇒ Item 3 \(page 6\)](#)

6 - Fan Activation Relay -J937-


☐ Only high-voltage models, from week 47/2016

6.1 - High-Voltage Battery Coolant Pump Relay -J1156-

☐ Only high-voltage models

6.2 - Thermal Management Coolant Pump Relay -J1141-

☐ Only high-voltage models, from week 47/2016

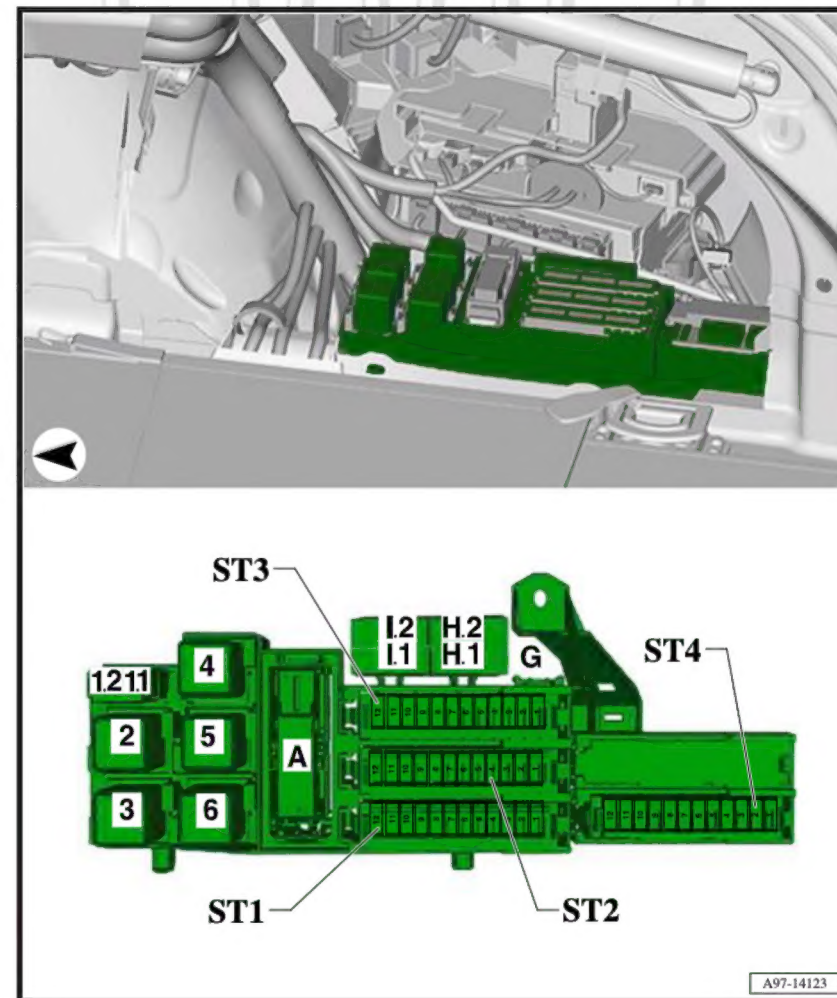


1.3 Relays on relay carrier behind I/P

◆ [⇒ o1.3.1 n relay carrier behind left I/P, LHD", page 3](#)

1.3.1 Relays on relay carrier behind left I/P, LHD

- 1 - Preheating Coolant, Low Heat Output Relay -J359-
- 2 - High heat output relay -J360-
- 3 - Auxiliary Air Heater Control Module -J604-
 - ❑ Only high-voltage models

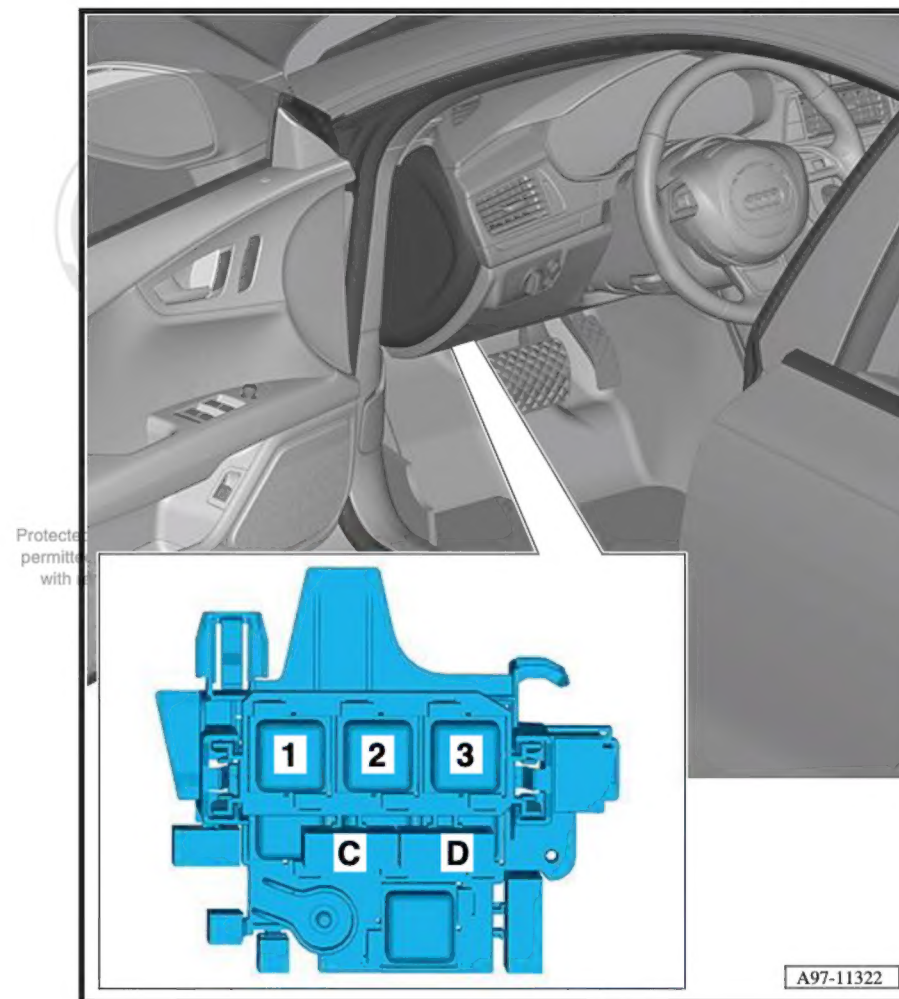


1.4 Relay carrier behind I/P

- ◆ ⇒ [c1.4.1 carrier behind left I/P, LHD, through MY 2014", page 4](#)
- ◆ ⇒ [c1.4.2 carrier behind left I/P, LHD, from MY 2015", page 5](#)

1.4.1 Relay carrier behind left I/P, LHD, through MY 2014

- A - Fuse panel D -SD-
- C - Not used
- D - Double Connector -T2bi-, green
- E - Double Connector -T2bh-, black
- 1 - Horn Relay -J413-
- 1 - Automatic Day/Night Interior Mirror Relay -J910-
- 2 - Terminal 15 power supply relay -J329-
- 3 - Vacuum Pump Relay -J318-
 - ❑ Only high-voltage models
- 4 - Not used
- 5 - 6-Pin Connector -T6p-, black, Clutch Electronic Steering Column Lock Control Module -J764-

Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. All rights reserved with respect to the correctness of information.

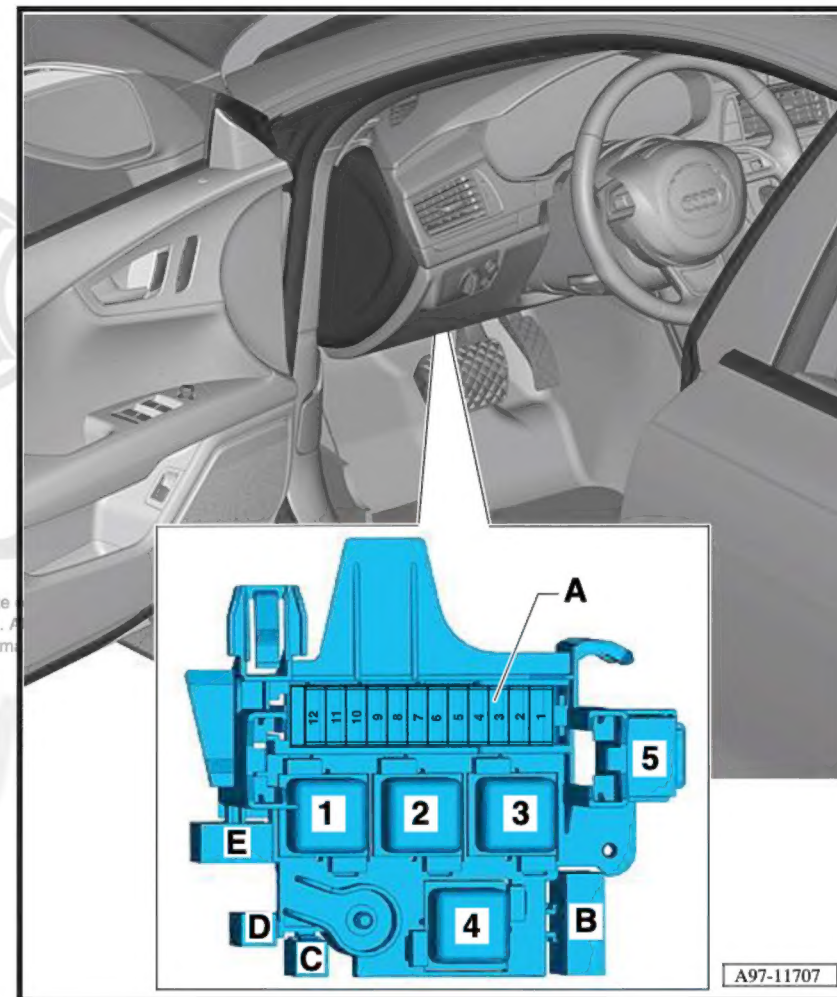

1.4.2 Relay carrier behind left I/P, LHD, from MY 2015

A - Fuse panel D -SD-

C - Not used

D - Double Connector -T2bi-, green

E - Double Connector -T2bh-, black

1 - Horn Relay -J413-

1 - Automatic Day/Night Interior Mirror Relay -J910-

2 - Terminal 15 power supply relay -J329-

3 - Vacuum Pump Relay -J318-

☐ Only high-voltage models


☐ To KW 04/2018

☐ From KW 05/2018 refer to [⇒ Item 5 \(page 3\)](#)

4 - Not used

5 - 6-Pin Connector -T6p-, black, Clutch Electronic Steering Column Lock Control Module -J764-

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

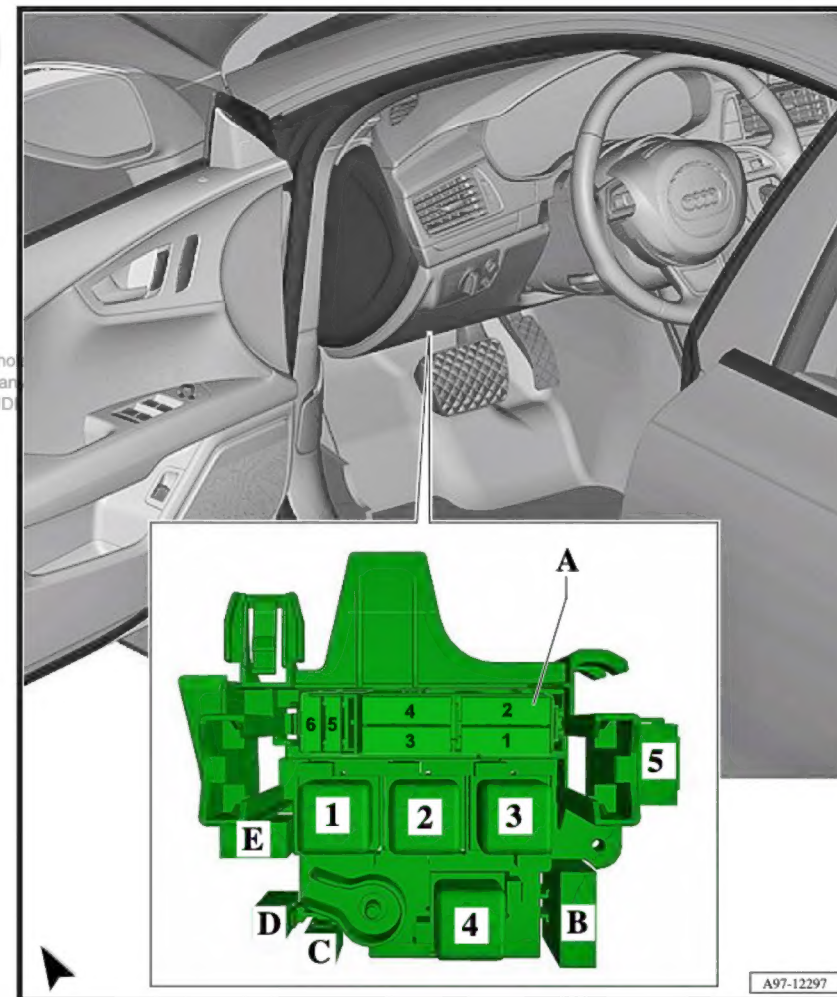

1.5 Relay carrier in E-box in plenum chamber

♦ [⇒ c1.5.1 arrier in E-box in plenum chamber, LHD", page 6](#)

1.5.1 Relay carrier in E-box in plenum chamber, LHD

A - Fuse Panel A -SA-

E - Terminal 30

1 - Secondary Air Injection (AIR) Pump Relay -J299-, gasoline engine

2.1 - Starter Relay -J53-

2.2 - Starter Relay 2 -J695-

3 - Engine Component Power Supply Relay -J757-, gasoline engine

3 - Automatic Glow Time Control Module -J179-, diesel engine

4 - Main Relay -J271-, gasoline engine

4 - Terminal 30 power supply relay -J317-, diesel engine

5 - Auxiliary Engine Coolant (EC) Pump Relay -J496-, gasoline engine


5 - Transmission Hydraulic Pump Relay -J510-

□ Only models with High-Voltage System

6 - Not used

7 - 17-Pin Connector -T17b-, red

8 - 17-Pin Connector -T17a-, white

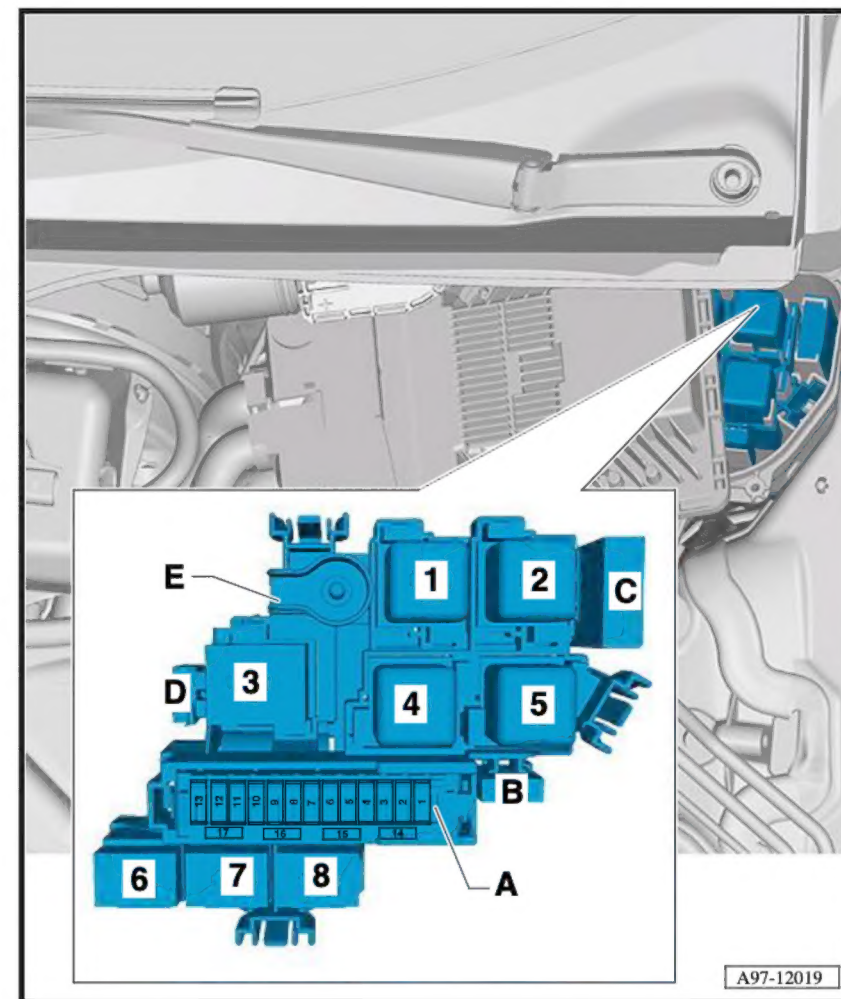

1.6 Relay carrier in E-box engine compartment, V6 TDI only, from model year 2015

C - Fuse Panel A -SA-

1.1 - Starter Relay -J53-

1.2 - Starter Relay 2 -J695-

2 - Terminal 30 power supply relay -J317-

3 - Automatic Glow Time Control Module -J179-

Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG assumes no liability with respect to the correctness of information in this document.

